

# FIREPRO

## FIRE PROTECTIVE BUILDING PRODUCTS

HEAD OFFICE: AUCKLAND (09) 579 0367  
WELLINGTON (04) 568 7086 • CHRISTCHURCH (03) 379 9364  
[www.firepro.co.nz](http://www.firepro.co.nz) [sales@firepro.co.nz](mailto:sales@firepro.co.nz)

CI/SfB

B311 DATASHEET - AUG08

Product specifications can change. Contact us to ensure you have our latest datasheet

## FIREPRO B311 (Extra Compact) RETROFIT FIRE COLLARS



### DESCRIPTION

Firepro B311 Retrofit Fire Collars prevent the spread of fire where PVC and PE plumbing pipes penetrate concrete fire walls and floors. Also for use on PP-R pipes as per PPR Table, and 15mm or 20mm internal diameter polybutylene pipes.

The B311 collar is suitable for use where the collar is placed outside the wall or below the floor. With the addition of the optional 'click on' flange oversize holes may be accommodated.

Unlike intumescent assisted mechanical damper type fire collars, Firepro B311 contain no fusible links or moving parts to require servicing. As the fire stopping intumescent material in our product is around the outside of the uninterrupted pipe it does not affect the performance of the pipe.

### INSTALLATION


The collars are designed to be bolted to the underneath of the concrete floor. In wall situations one collar should be used on the outside of each face of the fire rated wall.

To fit the collar open the collar by twisting the body to unlatch the holding clip. Refasten the holding clip. Using all fixing tabs, fasten with 8mm diameter steel bolts to the fire rated wall or floor. To ensure an acoustic and smoke seal around the pipe use Firepro M707 acoustic fire rated sealant. See diagram for application position.

For installation with the optional flange, see reverse side of this sheet.

### ACOUSTIC

The use of Firepro M707 Fire & Acoustic Sealant as shown maintains the acoustic performance of the wall or floor as well as providing smoke control. For further acoustic control on pipes choose from Firepro Centabuild's range of noise control insulation.

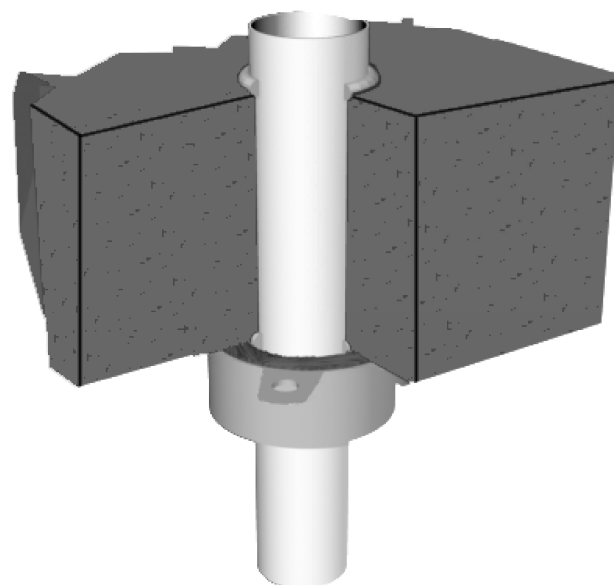


### FIRE TEST DATA

Firepro B311 Fire Collars are tested and approved under AS1530:4, AS4072:1 1992 section 3 with uPVC pipes 2 metres long uncapped at end outside the furnace to maximise test severity, and fire laboratory assessed and approved for use with PE (Polyethylene) pipes complying with AS4130, for up to 4 hours FRL in floors and 2 hours FRL on walls and BS476.20:22 for 3 hours FRL in concrete floors and 2 hours FRL on walls. Fire tested on PP-R pipes as set out in Table3 to the above standards, fire laboratory assessed for polybutylene 15mm and 20mm ID pipes complying with AS/NZ2642:2 with either B311-32 or B311-40 collar.

*NOTE: The technical information and suggestions for use and application presented herein represent the best information available to us and are believed to be reliable. They should not however be construed as controlling suggestions and there is no warranty of performance of our materials either expressed or implied. We urge that users of our materials conduct confirmatory tests to determine final suitability for their specific end uses. All dimensions are nominal. We reserve the right to make changes or to withdraw designs and products without notice.*

# B311 Flange for B311 Fire Collars

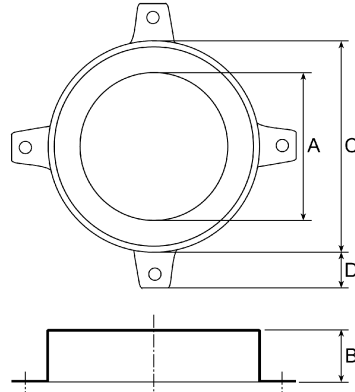

## DESCRIPTION

B311 Flange is an optional addition to the Firepro B311 Extra Compact Fire Collar. The flange which is made in 2 parts clicks onto the B311 collar to give the collar additional applications.

The flange covers untidy holes and allows installation where holes are too wide or where the substrate close to the hole is rough. In hollow wall construction the wide spacing of the flange fixing points allows easy fixing to studs and nogs. All four fixing points must be used.

## B311 Collar Dimensions

Dimensions in millimetres (nominal):

	A	B	C	D
B311-32	37	33	64	20
B311-40	45	33	82	20
B311-50	59	33	95	20
B311-65	72	33	115	20
B311-80	85	33	123	20
B311-100	110	45	152	20
B311-150	160	62	202	20

For larger size pipes see our B312 range of collars

## Flange Dimensions




Dimensions in millimetres (nominal):

Flange for:	Dimension E
B311-32	148
B311-40	148
B311-50	161
B311-65	172
B311-80	188
B311-100	213
B311-150	263.5

## APPLICATION OF B311 COLLAR WITH B311 FLANGE

With pipe in wall  
(Ask for test details).

Through Floors

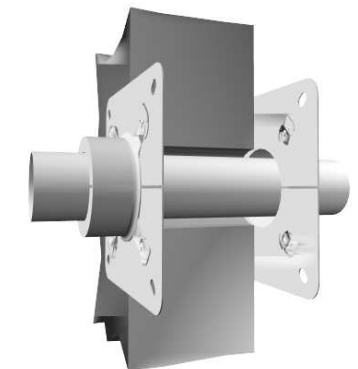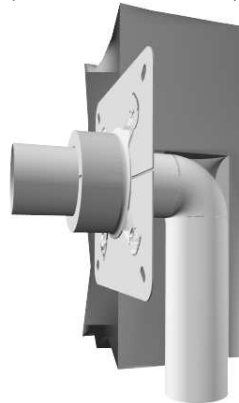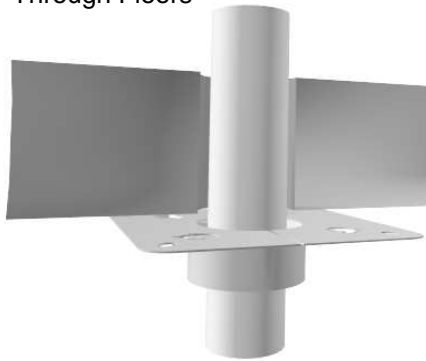

Application in standard concrete fire walls requires a collar on each fire rated face of the wall.

## PP-R PIPES

For concrete floors fire-tested in the conventional manner to AS1530:4, AS4072:1 1992 section 3, and BS476:20. Under BS476:20:22 convention may also be used on concrete walls where BS476:20 is approved.

## PP-R - FLOORS - Concrete

FRR/FRL Achieved	Pipe Outside Diameter	PP-R Pipe Wall Thickness	Firepro Fire Collar Identification
4 Hr	16mm	2.2mm	B311-32
4 Hr	20mm	2.8mm	B311-32
4 Hr	25mm	3.5mm	B311-32
4 Hr	32mm	4.4mm	B311-32
4 Hr	40mm	5.5mm	B311-40
4 Hr	50mm	6.9mm	B311-50
4 Hr	63mm	8.6mm	B311-65
30 Mins	75mm	10.3mm	B311-80
30 Mins	90mm	12.3mm	B311-100
30 Mins	110mm	15.1mm	B311-100
30 Mins	125mm	11.4mm	B311-150

## Polybutylene Pipes

15mm and 20mm internal diameter polybutylene pipes that comply with AS/NZ2642:2 penetrating concrete floors and walls may be protected with B311-32 or B311-40 collars.

*The technical information and suggestions for use and application presented herein represent the best information available to us and are believed to be reliable. They should not however be construed as controlling suggestions and there is no warranty of performance of our materials either expressed or implied. We urge that users of our materials conduct confirmatory tests to determine final suitability for their specific end uses. All dimensions are nominal. We reserve the right to make changes or to withdraw designs and products without notice.*